



# SPECIALIST FOR YOUR WOOD


## INDULINE OW-815

Water based, protective surface coating with special UV absorbers and lignin stabilizers for woodterrace boards

- ✓ FOR EXTERIOR AND INTERIOR USE
- ✓ EASY TO APPLY/FAST DRYING
- ✓ WATER BASED-NO ODOUR
- ✓ WATER RESISTANT/UV RESISTANT
- ✓ NO FLAKING OR PEELING
- ✓ PROTECTS FROM ALGAE, MUOLD
- ✓ NATURAL AND MATT LOOK



**DIY**  
DO IT YOURSELF

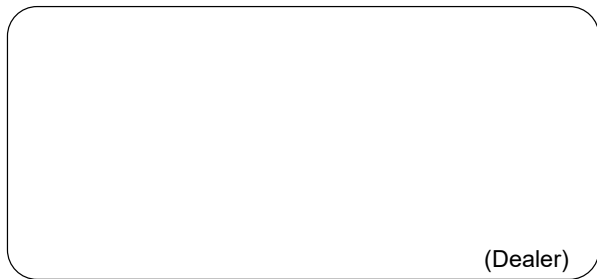

(Dealer)



**BUILDWELL  
COATINGS**

[buildwellcoatings@gmail.com](mailto:buildwellcoatings@gmail.com)



## पॉलिश करने की विधि

- 1.** पहले से पेंट या पॉलिश करी हुई लकड़ी-पुरानी पॉलिश या पेंट को पेंट रिमूवर और रेगमाल लगा कर उतार लें। कोरी लकड़ी दिखने लगेगी।
- 2.** अगर कोई मरम्मत या भराई करनी है तो वुड फिलर या पुट्टी से करें। फेविकोल इस्तेमाल नहीं करें।
- 3.** नई लकड़ी या उतारी हुई लकड़ी को 80/120 ओर फिर 400/600 (पानी वाला) रेगमाल से चिकाना कर लें। रेगमाल लकड़ी की नसों की दिशा में ही लगाएं।
- 4. पहला कोट: SW 900 या OW 815** लगाएं ब्रश से और आठ-दस घंटे सूखने दें।
- 5. दूसरा कोट:** पहले धूल को 1000 नम्बर रेगमाल लगा के झाड़ लें। **OW 815** का कोट ब्रश से लगाएं और 8-10 घंटे सूखने दें।
- 6. तीसरा कोट:** पहले धूल को 1000 नम्बर रेगमाल लगा के झाड़ लें। **OW 815** का कोट ब्रश से लगाएं और 8-10 घंटे सूखने दें।
- 7.** सूख जाने पर अगर जरूरी समझें तो 1000 नम्बर रेगमाल से धूल झाड़ लें।
- 8.** आम तौर से दौ कोट काफी हैं। डेक फ्लोर या कच्ची लकड़ी पर अगर पानी या घूप ज्यादा पड़ती हो तो तीन कोट कर सकते हैं।
- 9.** फरश पर पानी को रुकने न दें उसे झाड़ु से निकाल दें।



buildwellcoatings@gmail.com